

HCA—YS1V系列直流电流变送器


(HCA—YS1Vseries DC current transducer)

HCA—YS1V 系列直流电流变送器是应用磁调制原理研制而成的一种新型电流传感器，其输出的稳定性好，初、次级之间高度绝缘，用于讯号系统、线路检测、电监测系统等直流电流测量。(HCA—YS1V series of DC current transducer application of magnetic modulation principle from the development of a new type of current sensor, output stability between primary and secondary highly insulated for signaling systems, line detection, electrical monitoringDC current measurement.)

电气参数 (Electrical characteristics)								
	型号 Type	HCA1—YS1V	HCA5—YS1V	HCA10—YS1V	HCA20—YS1V	HCA50—YS1V	HBA100—YS1V	
Ipn	额定输入电流 (DC) Rated input	±1	±5	±10	±20	±50	±100	A
Ipm	测量电流范围 (DC) Measuring range	±2	±10	±20	±40	±100	±200	A
RL	负载电阻 Load resistance	$\geqslant 10$						KΩ
Vout	输出电压 Rated output voltage	±5						V
Vo	零电压失调 Zero offset voltage	<±25						mV
Vc	电源电压 Supply voltage	±15±5%						V
Ic	静态功耗 Current consumption	$\leqslant 25+I_{out}$						mA
Iot	零点温漂 Thermal drift of Io	$\leqslant \pm 0.5$						mV/°C
F	带宽 Frequency bandwidth(-3 dB)	DC						Hz

εG	精度 Accuracy	0.5 (0.2 可选)	%
εL	线性度 Linearity	± 0.2	%
Tr	响应时间 Response time	≤ 200	mS
Vd	绝缘电压 Insulation voltage	2.5	KV
Ta	工作温度 Ambient operating temperature	-25~+70	°C
Ts	储存温度 Ambient storage temperature	-40~+85	°C
M	重量 mass	90	g
	标准 Standards	EN50178\IEC61010-1\UL94-Vo\ROHS	


机械参数 Dimensions (mm)

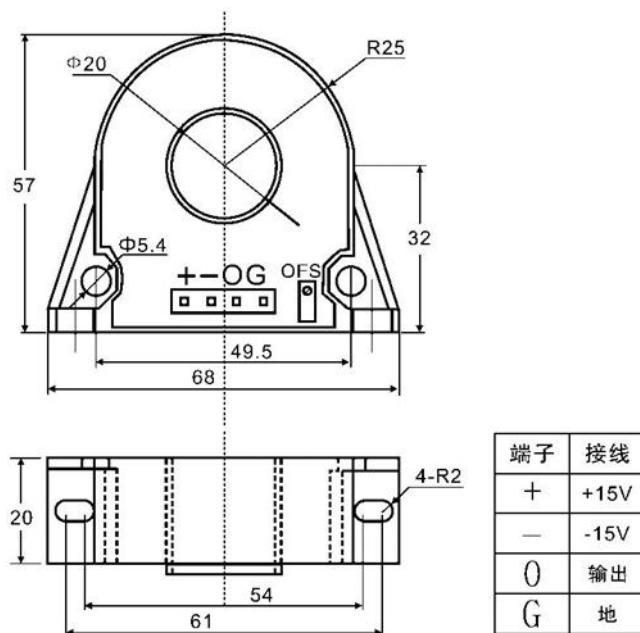

引脚说明: +: +15V; -: -15V; 0: Out; G: 公共地

端子标准: 5.08mm, 4pin 插接端子

线性关系 (Linear)

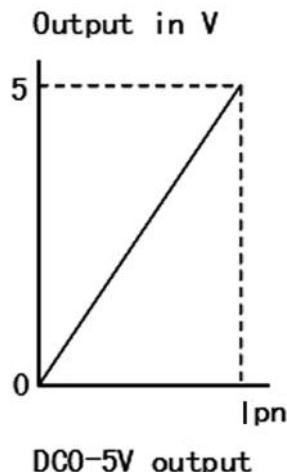

使用说明 Remarks

- 1、应用：通讯电源、不间断电源UPS、斩波器、电化学、整流、电源监测、电焊机、变频、开关电源、电池监测、电动机监测等领域。Application: communication power supply, uninterruptible power supply UPS chopper, electrochemical, rectifier, power monitoring, welding machines, inverter, switching power supply, battery monitoring, motor monitoring fields.
- 2、传感器的输出幅度可根据用户需要进行适当调节。The amplitude of the output of the sensor can be appropriately adjusted according to user needs.
- 3、可按用户需求定制不同额定输入电流和输出电压的传感器。Custom different rated input current and the output voltage of the sensor.
- 4、当待测电流从变送器穿过，即可在输出端测得电流大小。（注意：错误的接线可能导致变送器损坏）When the current to be measured is across from the transmitter can be measured at the output current size. (Note: incorrect wiring may cause transmitter damage)